


CONNECTION - SCHEME

- minikitchen and wall cupboards -

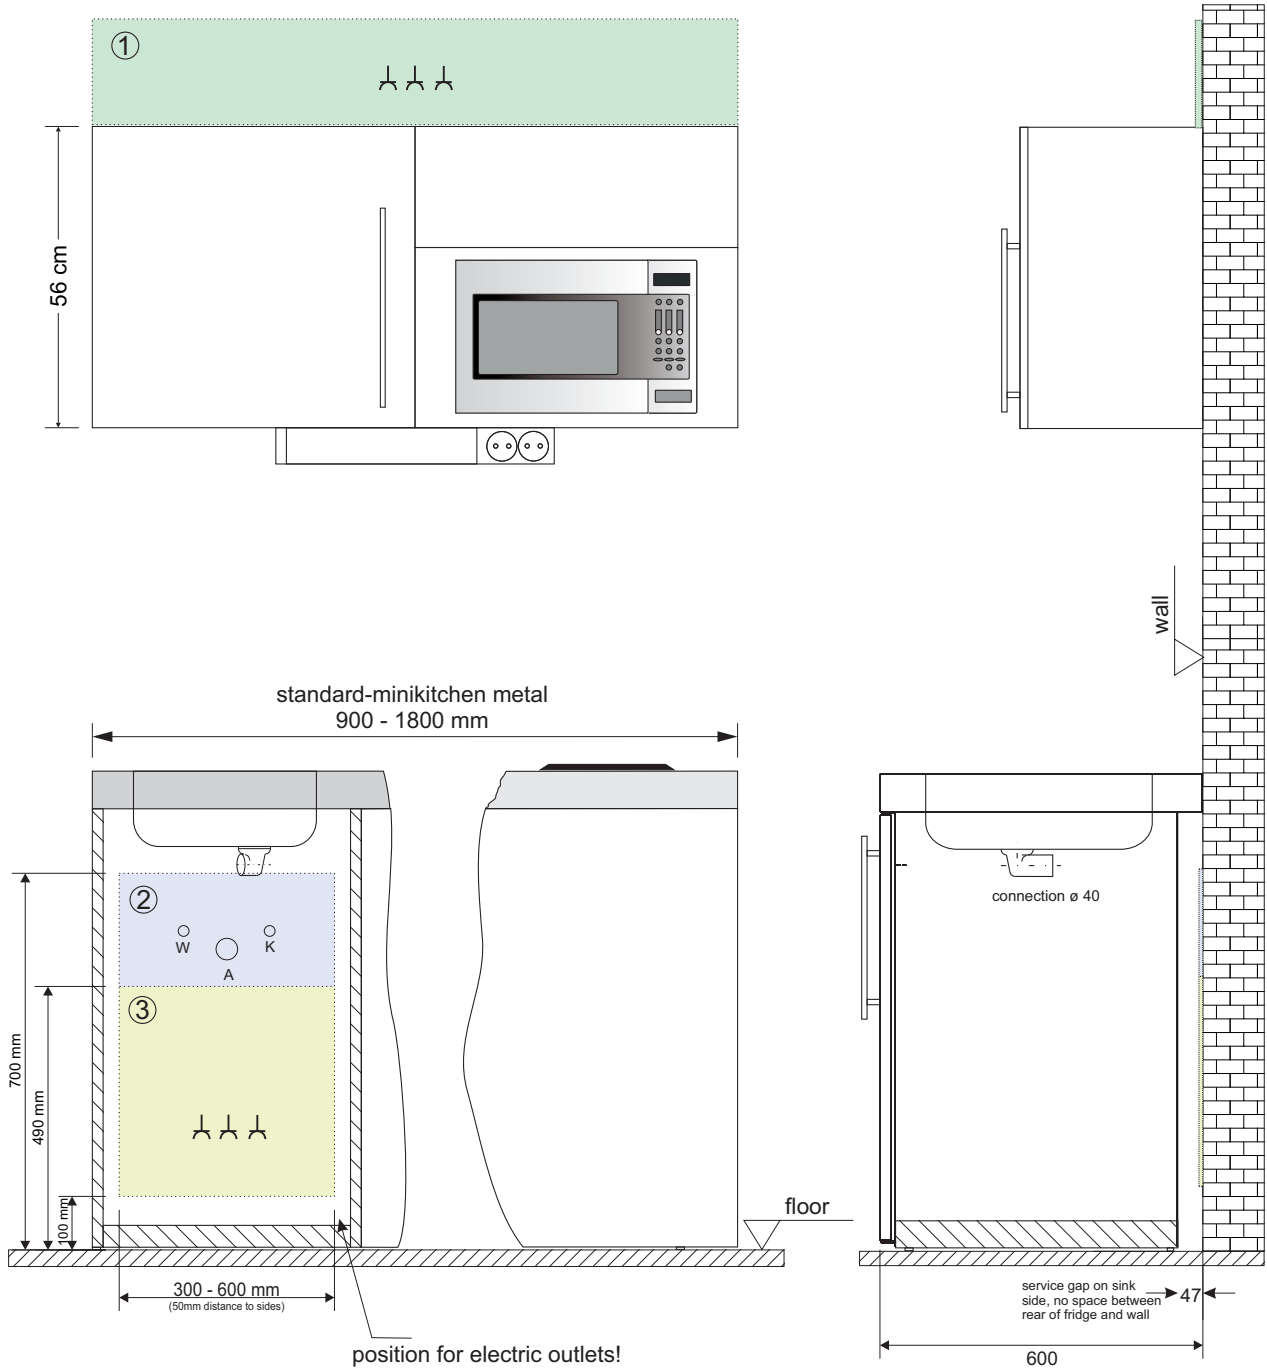

- ① recommended area for electrical connection wall cupboards (e.g. microwave, light, extractor hood, etc.)
- ② recommended area for water connection
- ③ recommended area for electrical connection minikitchen (e.g. fridge, microwave, dish-washer, oven, etc.)



Important note !!!
Drawing: Right hand hobs and left hand bowl.
Please check before installing which hob or bowl side you have and fix service connection accordingly.

Complaints afterwards won't be accepted!

We recommend installation by a qualified tradesperson.

Important note for the connection of the minikitchen:

- cupboards of the minikitchen are delivered without cupboard backs
- number of connection dependant on number of electric appliances
- all appliances with 230V - plug
- power data see datasheet of the appliances or minikitchen catalog

Distances in the installation area:

- wall - drawer	= 130 mm
- wall - dish-washer	= 65 mm
- wall - fridge Liebherr (MK / MP)	= 15-18 mm
- wall - fridge Stengel (ME)	= 50 mm
- wall - microwave	= 280 mm
- wall - oven	= 25 mm
- wall - shelf	= 50 mm

Errors excepted !